



(Above this picture used for USB cable only)

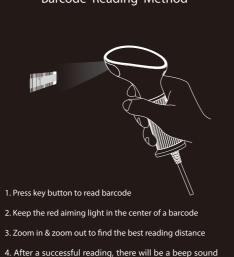


and a ring indicating light flashing, the aiming light die


out, then the data will be sent to the host system.

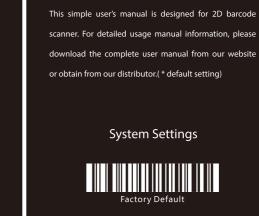




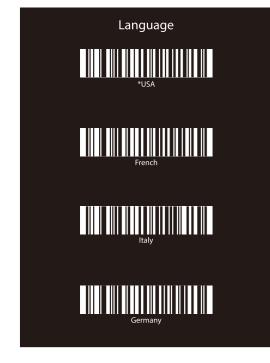



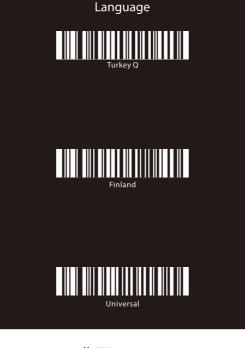

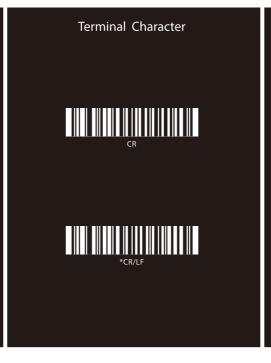



Data Interface

